



OKI B410/430/440 Drum Fuse Fitting

- 1) Remove the backing from the double sided tape on the fuse board

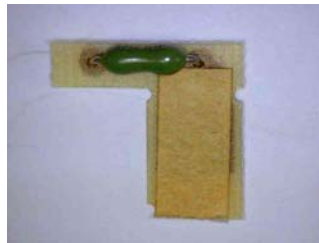

- 2) Clean the plastic area around the present drum board

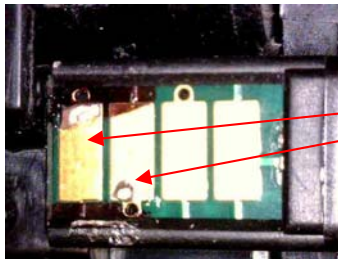

Clean these two areas

- 3) Fit the new board so that only two contacts are covered the other two contacts need to be free from obstruction

